




14515 E Don Julian Rd, City of Industry, CA 91746
Tel: 1-877-977-0656
Fax: 1-800-521-4712
Email: service@cozzia-usa.com

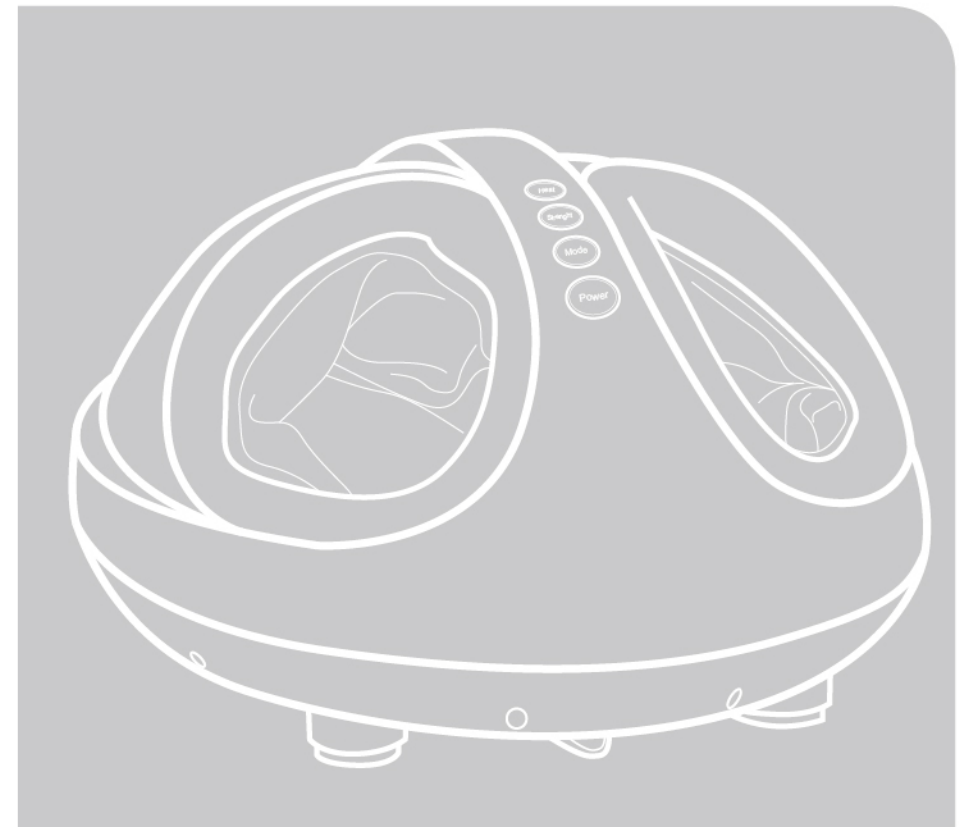

Air Foot Massager
Foot reflexology

CS-7010
Use & Care Manual

See more product update at:

WWW.COZZIAUSA.COM

See more product update at:

WWW.COZZIAUSA.COM

Welcome To **COZZIA**™

Thank you for purchasing the CS-7010 Air Foot Massager. Before using your Massager, please take some time to read the contents of this instruction manual, and for easy enjoyment of this product, please continue to use same as a reference guide.

COZZIAUSA.COM

Air Foot **Massager**

Foot reflexology

CS-7010

TABLE OF CONTENTS

Special Features	01
Safety Instructions	01-02
Product components and specifications	03-04
Product Operation Guide	05-06
Product Care	07-08
Warranty Information	09-11
Warranty Card Attachment	13

Special Features:

The CS 7010 Air Foot Massager is fitted with easy to use controls plus a fifteen minute usage auto-shutdown mechanism and is equipped with specialized kneading and Shiatsu massage functions coupled with a heat function to enhance Shiatsu massage.

Safety Instructions

i. Usage environment

- Do not use the appliance in wet condition or dusty environment as this may result in malfunction or electric shock.
- Do not use the appliance in the bathroom.
- Do not use the appliance on the bed.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Place the appliance in a safe location.
- Do not sit on the appliance.
- Do not expose the appliance to heat or direct sunlight.

ii. Unsuitable user

If you are experiencing health complications or conditions as stated below, please consult your doctor before using:

- Suffering from heart disease
- Pregnant
- Feeling unwell

iii. The product should not be used:

- For more than 15 minutes each time.
- By children or disabled without adult supervision.
- Before sleep.
- If the fabric cover is torn.
- If water is accidentally spilled onto the appliance.
- If abnormal or severe pain is felt during the massage.
- If any malfunction or abnormality occur when the appliance is operating.
- If there is lightning.

iv. Caution and warning

- Unplug appliance from power socket when not in use.
- Do not use accessories that are not authorised by COZZIA.
- Never operate this appliance if it has a damaged cord or plug. Please return the unit to COZZIA Service Center for examination and repair.



- Never drop or insert any object into any of the openings on the appliance.
- Use the heating surfaces carefully. It may be dangerous for children or the disabled to use the heating surfaces without supervision .
- Do not lift or carry this appliance by the power cord.
- This appliance is designed only for personal use, not for professional or any other uses.
- Do not cover the appliance when it is operating to prevent malfunction or fire hazard.
- Do not squash the appliance or scratch it with sharp objects.

v. Note

- To ensure that this appliance is used safely and correctly, do not operate it without reading this user manual carefully .
- The appliance is not intended for use by children and persons with physical and mental disabilities without the supervision of a guardian.
- Extensive usage could lead to excessive heating and shorter product lifespan. Should this occur, stop the appliance and allow it to cool down before continue using.
- If you are under medication or undergoing medical therapy, please consult your doctor before using the appliance. Please do not use the product if you are not feeling well.
- If you start out using the appliance in a low-temperature room, please do not increase the temperature abruptly. It is advisable to increase the temperature gradually before continue using the appliance.
- If the appliance is moved from a low-temperature room to higher temperature one, please wait for one hour before using it.
- Do not remove the cover of the appliance. Touching the internal components may cause the appliance to malfunction or result an electric shock to occur .
- Do not connect or disconnect the power plug from the electrical outlet with wet hands.
- Do not use the appliance if the electrical outlet is loose.


Product Components and Specifications:

Product Parts

Verify The Contents Inside The Box:

- 1 Remove the content inside the box.
- 2 Check the availability of the items below. In case of any parts are missing, please contact COZZIA technical support team.
 - Mesh Fabric
 - Rollers
 - Function Button
 - Adaptor
 - Rubber Pad

Product Components

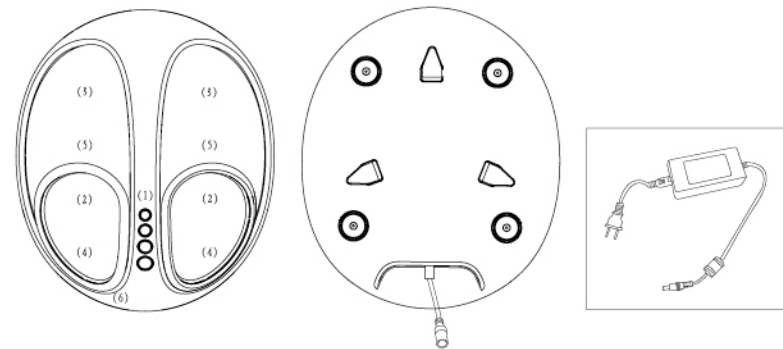

1. Central Surface: 4 independent control buttons– Function Keys.
2. Inside Middle Bottom: Scraping massage heads–Massage the bow area of feet with heating.
3. Inside Front Bottom: Rolling massage heads–Massage the sole area.
4. Inside Rear Bottom: Kneading massage heads–Massage heel area.
5. Upper Inner Lining: Air bags–Air pressure massage on instep.
6. Inside Bottom Surface: Removable and washable fabric cover.
7. Bottom: Wire hide-in design.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

Correct Disposal of this product



Caution: read this user manual carefully before use.

Product Specifications

Product name	Air Foot Massager
Model No.	CS-7010
Power source	DC 24V
Alternating current	50/60Hz
Power consumption	50W
Timer	15 minutes
Dimension(Length/width/height)	16.42" x 14.06" x 8.82"
Weight	9.1 lbs

Product Operation Guide



i. Preparation before use

1. Before Using the Appliance

- Please take out the appliance from the poly bag.
- Please read the user manual carefully .
- Plug the appliance into the power socket, and the massager will be ready for use.

2. Using the Machine

- Place your feet gently onto the massage area to begin the massage.

ii. Operation guide

1. Power:

Please connect the adapter plug to the power outlet. When the appliance is powered on, press the power button to enter into the first massage program. Press the button again to stop the machine.



2. Mode

When the power is on, the first massage mode is activated, and the indicator light is blue. Press the button again, the machine turns to the second massage program, and the indicator light is red.

3. Strength

When the power is on, the airbag massage is set at low intensity, and the indicator is blue. Press the button again to increase the pressure and the indicator light turns to red.

4. Heat

Heat is automatically turned on when the power is on. Press the Heat button once to switch it off and press it again to turn it back on.

iii. Display

1. Kneading and Shiatsu functions for feet relaxation.
2. Heat function to enhance Shiatsu benefits and improve blood circulation.
3. Easy-to-use controls.
4. Auto shut-down after 15 minutes.
5. LED indicators.

iv. After Use

After using, press the "Power" button to stop the massager and unplug it from the power socket.

Product Care:

STORAGE

- Place the massager into its box or keep it in a safe, dry, and cool place. Avoid contact with sharp edges or pointed objects that might cut or puncture the surface. Keep the power cord in a coil and store it in the bottom frame under the appliance. Do not hang the unit by the power cord.

CLEANING

- Do not immerse the unit into any liquid during cleaning.
- Unplug the unit and allow it to cool down before cleaning it.
- Clean only with a soft and slightly damp sponge.
- Never allow water or any other liquid to come into the unit.
- Avoid using abrasive cleaners, brushes, gasoline, kerosene, glass / furniture polish or paint thinner to clean.
- Do not attempt to repair the product. For servicing, please contact COZZIA.

CAUTION

- Prevent the mesh fabric from tearing.
- Use the machine gently to avoid damaging the machine as well as to prevent injuries.



PRODUCT TROUBLESHOOTING

This massager is susceptible to power surge, even by +10% or -15%. The following circumstances may occur:

Problems	Solutions
Not operating	<ol style="list-style-type: none"> 1. Plug in the power cord 2. Check if the power cord is properly connected
No heat function	Heat function will only be activated after pressing the button twice
The controller is working but not the massager	The massager could be overheated after prolonged use and triggered the machine's overheating fail-safe system. Please turn off the power and allow the massager to cool down for 30 to 50 minutes.
Massage function not operating	<ol style="list-style-type: none"> 1. Turn on the power switch 2. Reconnect the power cord
Machine stops suddenly	<ol style="list-style-type: none"> 1. Switch on the power socket 2. Reconnect the power cord

Warranty Information

Limited One Year Warranty (Valid in USA only)

COZZIA warrants that its products will be free of defects in material and workmanship under normal use and service.

Cozzia will not issue Return Material Authorizations (RMAs) to buyers.

Warranty Claim

- Warranty coverage starts at the time the consumer purchases the product. Proof of purchase is required for all warrant repairs. The warranty period is measured by continuous calendar days based on the seven day week.
- Warranties do not cover any loss or damage resulting from improper installation, unauthorized repairs or modifications, improper use of the electrical power supply, a malfunction or damage of an operating part from failure to implement the manufacturer's recommended maintenance, transportation damage, theft, abuse or misuse, neglect, vandalism, environmental conditions (such as fire, flood, exposure to weather conditions, windstorm, earthquake, hail, rust, corrosion, sand).
- Damage due to shipping and handling does not constitute a defect under this warranty.
- Under no circumstances shall Cozzia or its representatives be liable for indirect consequential or incidental damages (including damages for lost profits, business interruption, bodily injury, medical problems) even if the other party has been advised of the possibility of such damages or possible problems.
- All warranties begin on the date of purchase and no allowance or extension is offered for delivery and/or installation.



- This warranty is effective only if the product is purchased from COZZIA.
- Proof of purchase (original receipt) is required for all warranty repairs.
- All implied warranties, including but not limited to these implied warranties of fitness and merchantability, are limited to the duration stated in the warranty policy.
- Warranty does not cover accessories and add-ons which do not belong to the massage unit.
- Warranty is not effective to rental, business, commercial, institutional, or other non-residential users.
- All services covered by this warranty must be approved by COZZIA and repaired by authorised technicians only.
- If replacement parts for defective materials are not available, COZZIA reserves the right to make substitutions in lieu of repair or replacement.

Service and Technical Support:

- Consumers may contact Cozzia's Customer Service Department at 1-877-977-0656 between 9am and 5pm PST: Monday thru Friday or e-mail us at Service@cozzia-usa.com or visit our website at www.cozzia-usa.com for warranty and service issues.
- Customers are required to provide the unit serial number and dated proof of purchase (sales receipt) when they contact the Cozzia Service Department regarding repair.
- Non-warranty repair is provided on a 'per incident' basis. Cozzia customer service will verify that the unit has failed and provide instructions for repair. All applicable repairs, parts, shipping, handling, local tax and a 'per incident' fee will be charged for non-warranty repairs and support calls.



WARRANTY REGISTRATION FORM

Product Serial No. (located on product) _____

Purchase price _____ Model No. _____

First Name _____ Last Name _____

Address _____

City _____ State _____ Zip _____

Phone _____

Email _____

Please mail to:

COZZIA USA LLC

14515 E Don Juan Rd

City of Industry CA 91710

Tel: 1-877-977-0656

Fax: 1-800-521-4712