

cozzia®

Espreo

cozzia®

INSTALLATION MANUAL / Manuel d'installation | CZ-7505

Hello. Bonjour.

Congratulations on purchasing your new Cozzia CZ-7505/Espree.
Nous vous félicitons d'avoir fait l'acquisition d'Cozzia CZ-7505/Espree.

At Cozzia, we understand every body is different and have carefully designed our massage chair with that in mind. But enough about us, this is about you. Learning how to use your new chair is simple (we designed it that way).

Chez Cozzia, nous savons que chaque corps est unique et en avons tenu compte pour concevoir notre fauteuil de massage. Mais assez à propos de nous, nous sommes là pour vous. Apprendre à utiliser votre nouveau fauteuil est très simple (on l'a conçu ainsi!).

So let's get started.
Alors commençons.

Assembly Instructions / Instructions de montage

 
- 1 The CZ-7505 Massage chair arrives in 2 boxes.
Le fauteuil de massage CZ-7505 est livré en 2 boîtes.



- 2 **Open box 1 and remove all contents.** Remove the packing materials. Take the chair out of the box. Collect all the accessories and put them aside.
Ouvrez la boîte n°1 et retirez son contenu. Enlevez les matériaux d'emballage. Retirez le fauteuil de sa boîte et ensuite ramassez tous les accessoires et placez-les de côté.



- 3** **Locate the two catch pins.** Take off the catch pins and put them aside.
Identifiez les deux goupilles sur la base du fauteuil. Retirez-les et mettez-les de côté.

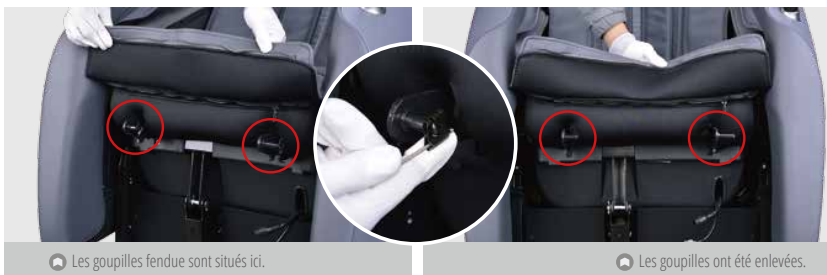

- 4** **Open box 2.** Take the footrest out of the box and move it close to the chair.
Ouvrir la boîte n°2. Retirer le repose-pieds de la boîte et le rapprocher du fauteuil.



- 5** **Connect wire connector and air hose connector.**
Attention: Align the white points of the two connectors first, then connect them together and screw with the screw cap.
Connecter le fil connecteur et le tuyeau d'air connecteur.
Attention: Aligner les points blancs des deux connecteurs en premier, et puis connecter les ensembles et visser avec le capuchon de vis.



- 6** **Hang the footrest on bolts of the base and lock with the two catch pins.**
Suspendre le repose pied sur les verrou de la base de la chaise de massage et barrer avec le clip en U.



- 7** **Attach the footrest fabric and seat pad.** Zip the zipper between the seat pad and the footrest cushion.
 According to the requirements of the UL standard for safety (UL1647), the zipper pull must be removed and discarded.
Attacher le tissu du repose-pieds et le coussin du siège. Ensuite fermez la fermeture éclair entre le coussin de siège et le coussin de repose-pieds. D'après les recommandations de sécurité, l'étiquette sur la fermeture éclair doit être enlever et disposer.



8

Turn on the chair. Place the remote control into the holder. Connect the chair to a power supply and turn on the power switch. Now your massage chair is ready to go!

Activez le fauteuil. Attachez le pavé tactile sur le support. Connectez le fauteuil par l'alimentation électrique et mettez l'interrupteur en marche. Le fauteuil sera maintenant prêt à utiliser.



Espree



USER MANUAL CZ-7505 - ESPREE

Hello.

Congratulations on purchasing your new Cozzia CZ-7505.

At Cozzia we understand every body is different and have carefully designed on our massage chair with that in mind. But enough about us, this is about you. Learning how to use your new chair is simple (we designed it that way).

So let's get started.


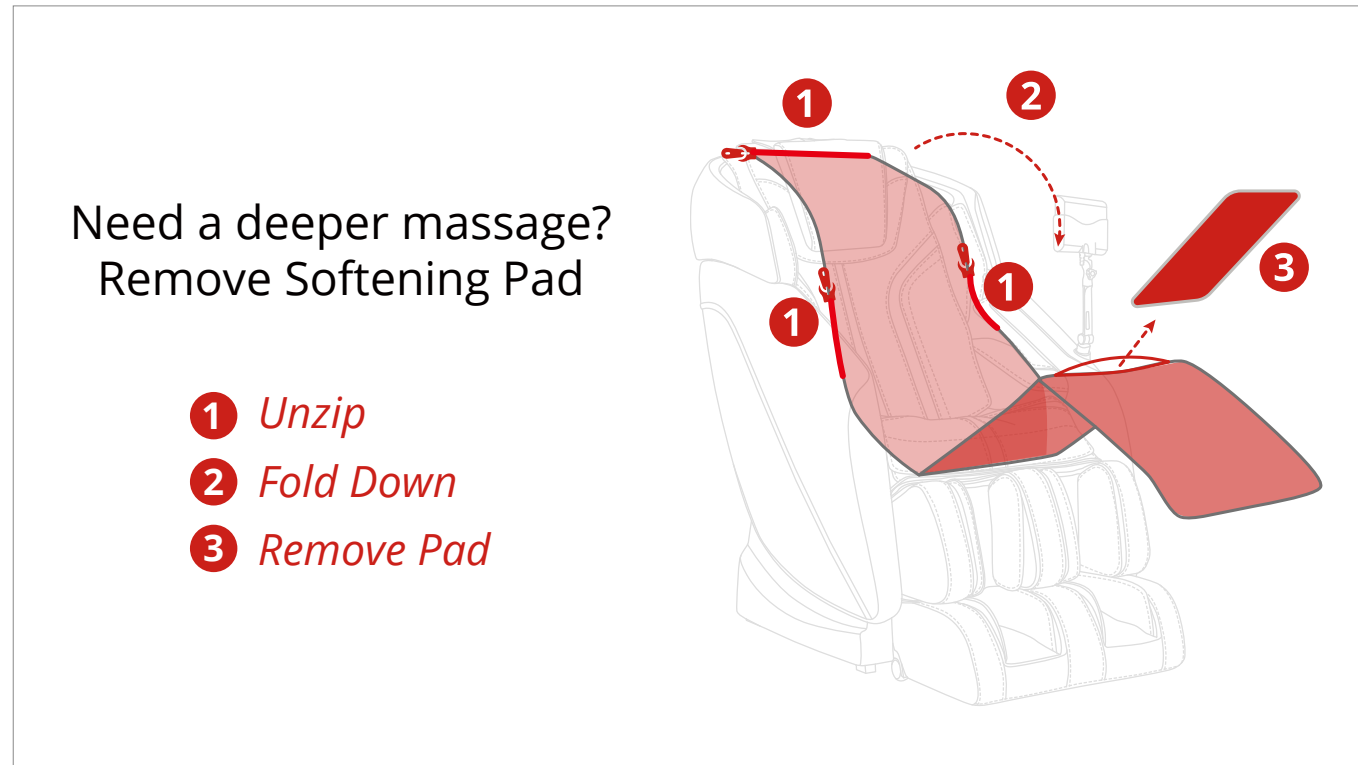 


TABLE OF CONTENTS


 INTRO	Dimensions	3
	Contents	4
 CHAIR	Move&Clearance	5
	Components	6
	Massage Points	7
	Specifications	8
 MASSAGE	Interface	9-10
	Pre-Programed Massage	11-14
	Demo	15-16
	Manual	17-21
	Custom Massage	22-25
	Settings	26-31
 CARE	Safety	32-34
	Grounding Instruction	34
	Troubleshooting	34
	Care and Storage	35
	Warranty	35-36

DIMENSIONS

 First, let's get your chair inside.

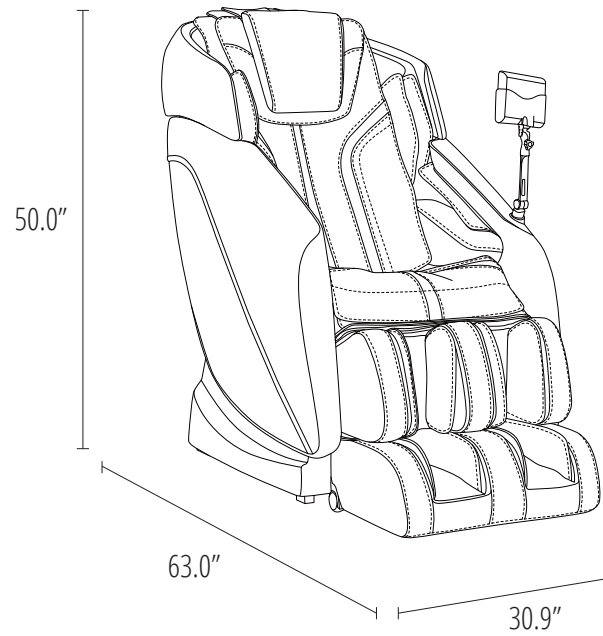


Box 1

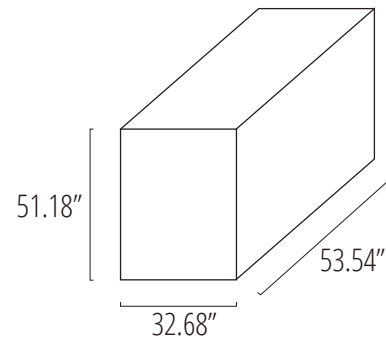 

Base & Backrest

 Box 2

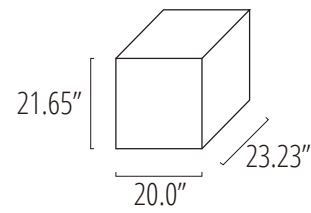


Footrest

CONTENTS

Everything you need for a relaxing experience.



 
User Manual

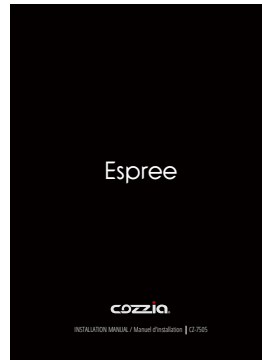


Installation Manual



 
Warranty Postcard

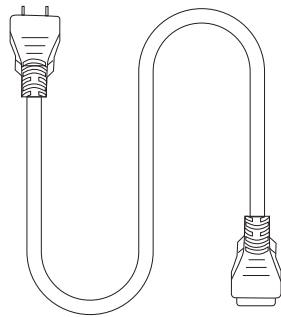

Power Cord

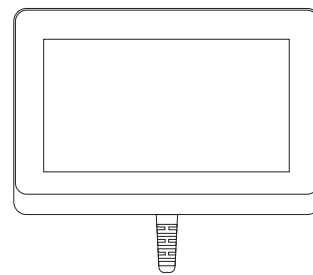 


Tablet Remote

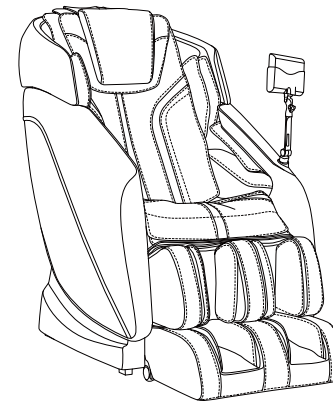 


CZ-7505 Massage Chair

 HANDLING INSTRUCTIONS

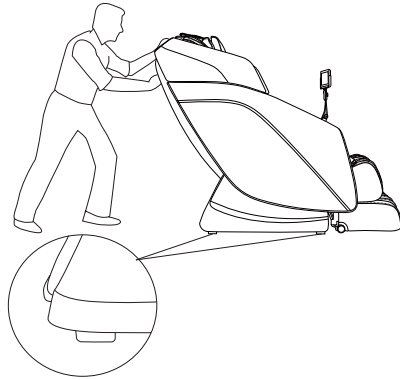


 Move with a slight pull or push
Caution: If you roll the chair on wood floor, marks may be left

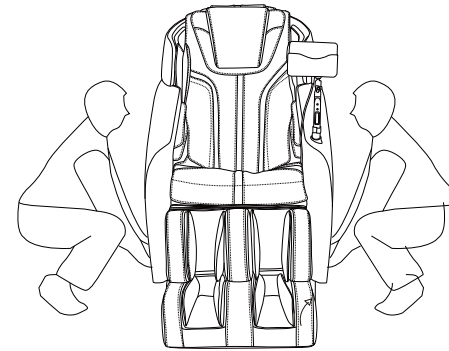


Two people are needed to lift the chair

 CLEARANCE

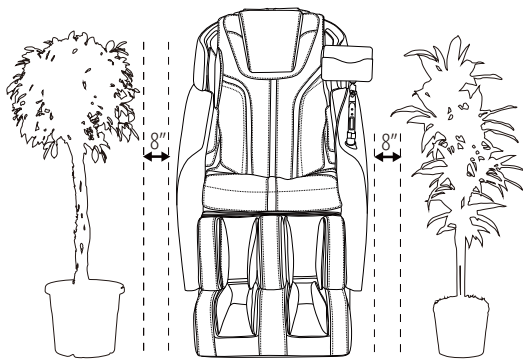


Reserve space on the left and right

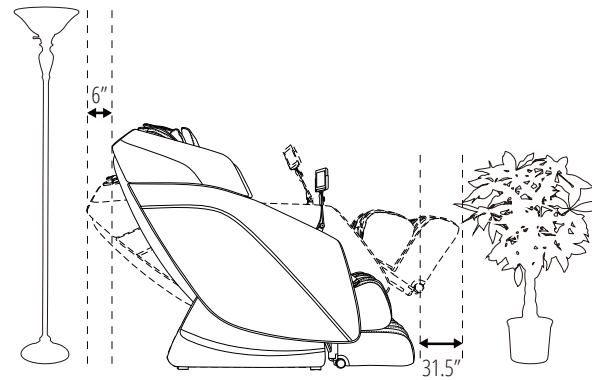 

Reserve space on the front and back

CHAIR COMPONENTS

 
Some of your chair's most important features.

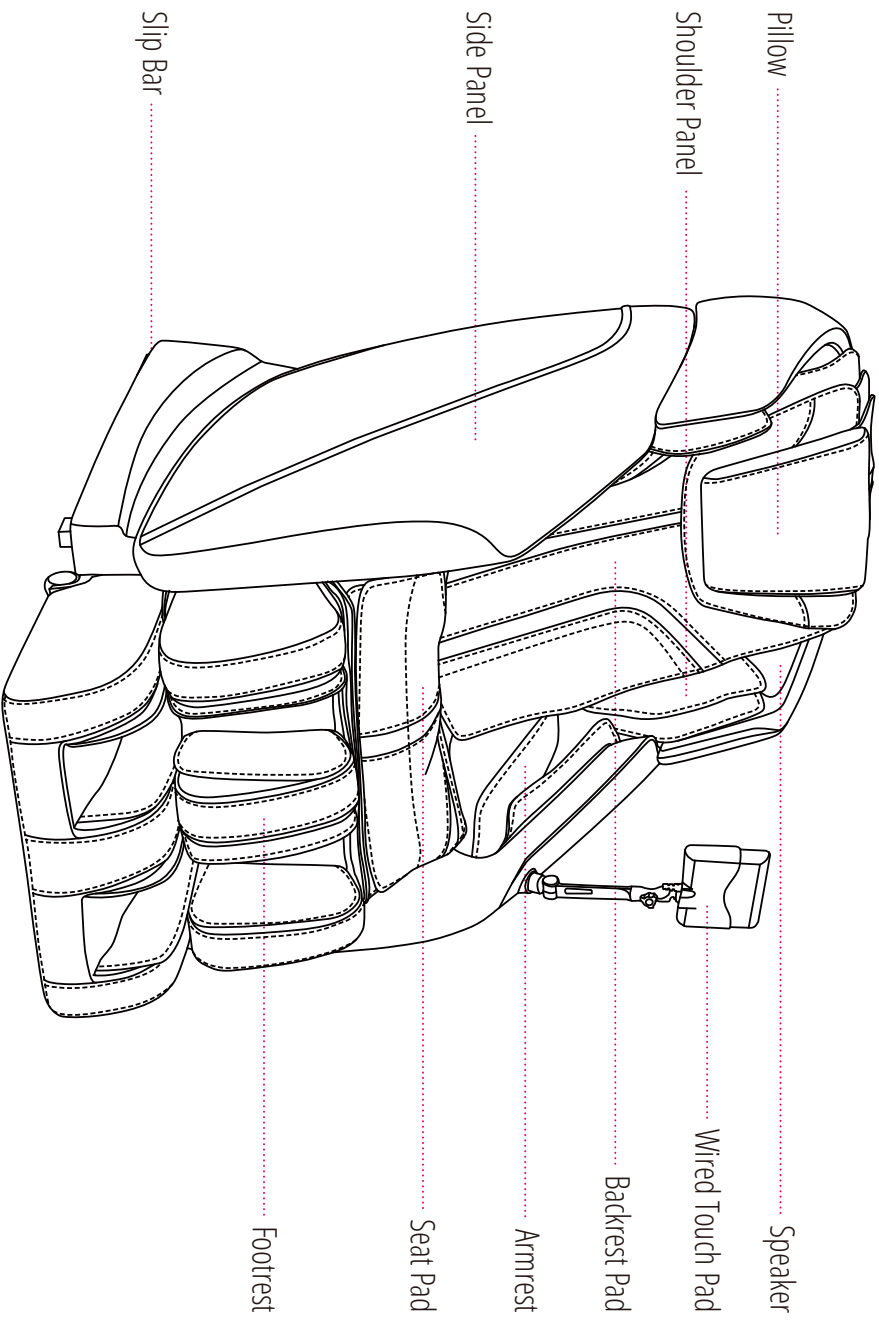

Note: The speaker will only operate when the massage chair is in operation

 To play music using your massage chair's speakers please connect your smartphone, tablet, or other electronic device to your chair, using bluetooth.

 MASSAGE POINTS

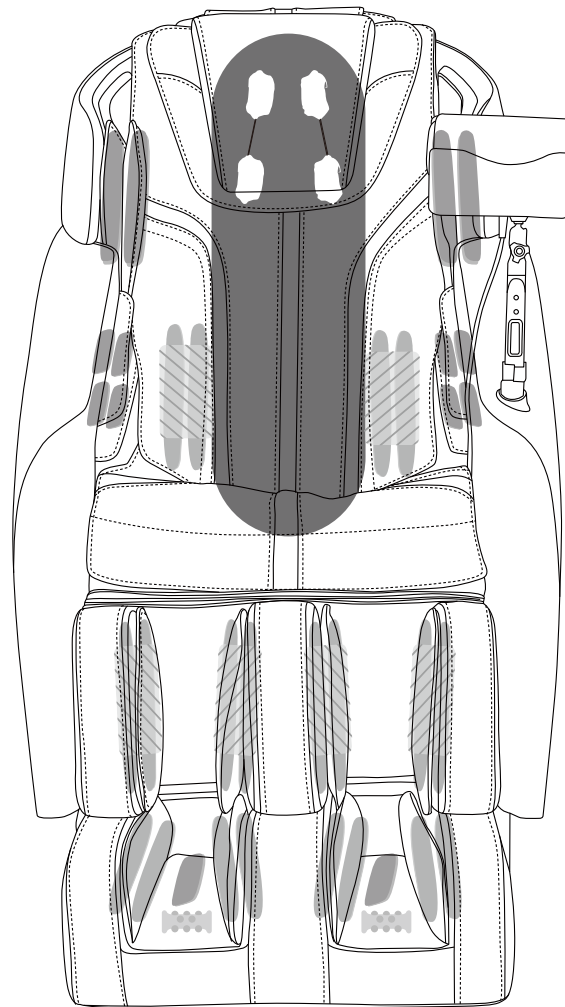

16 Air Bags
2 Heating Pads

10 Air Bags
4 Heating Pads

12 Air Bags
2 Rollers



Back Massage Mode



Air Bag



Heating Pads



Roller

CHAIR SPECIFICATIONS

A few important facts about your massage chair.



 
Model No.

CZ-7505



Max. Time Rate

30 minutes




Dimensions (L x W x H)

Chair Dimensions: 63.0" x 30.9" x 50.0"
Reclined Dimensions: 72.8" x 30.9" x 42.5"



Shipping Weight

 Gross weight: 281.7 lbs
Net weight: 233.7 lbs



Usage Condition

Environment temperature: 10°C-40°C
Contrasting humidity: 30-85RH



Storage Condition

Storage temperature: -20°C-60°C
Storage humidity level: 30-85RH



Power Consumption

115W



 
Rated Voltage

110-120V~



Rated Frequency

60Hz



Length of Wiring

Controller wiring: 27.6"
Power supply wiring: 70.9"

 


Safety Feature


Equipped with overheating and power surge detectors safety feature

WIRED TOUCH PAD INTERFACE

We have designed your massage chair's tablet controller with a user-friendly interface to make using your chair even easier.

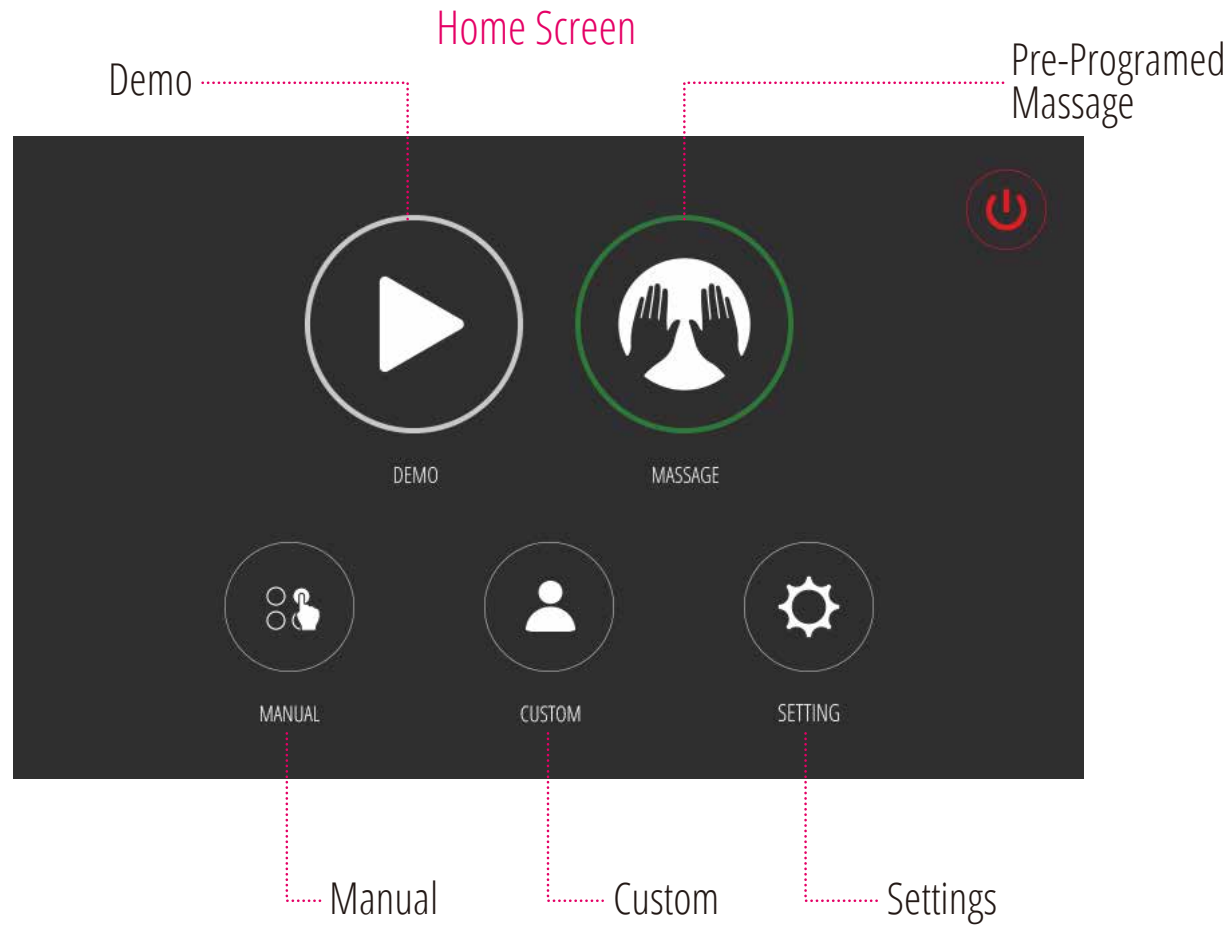


Massage Controls

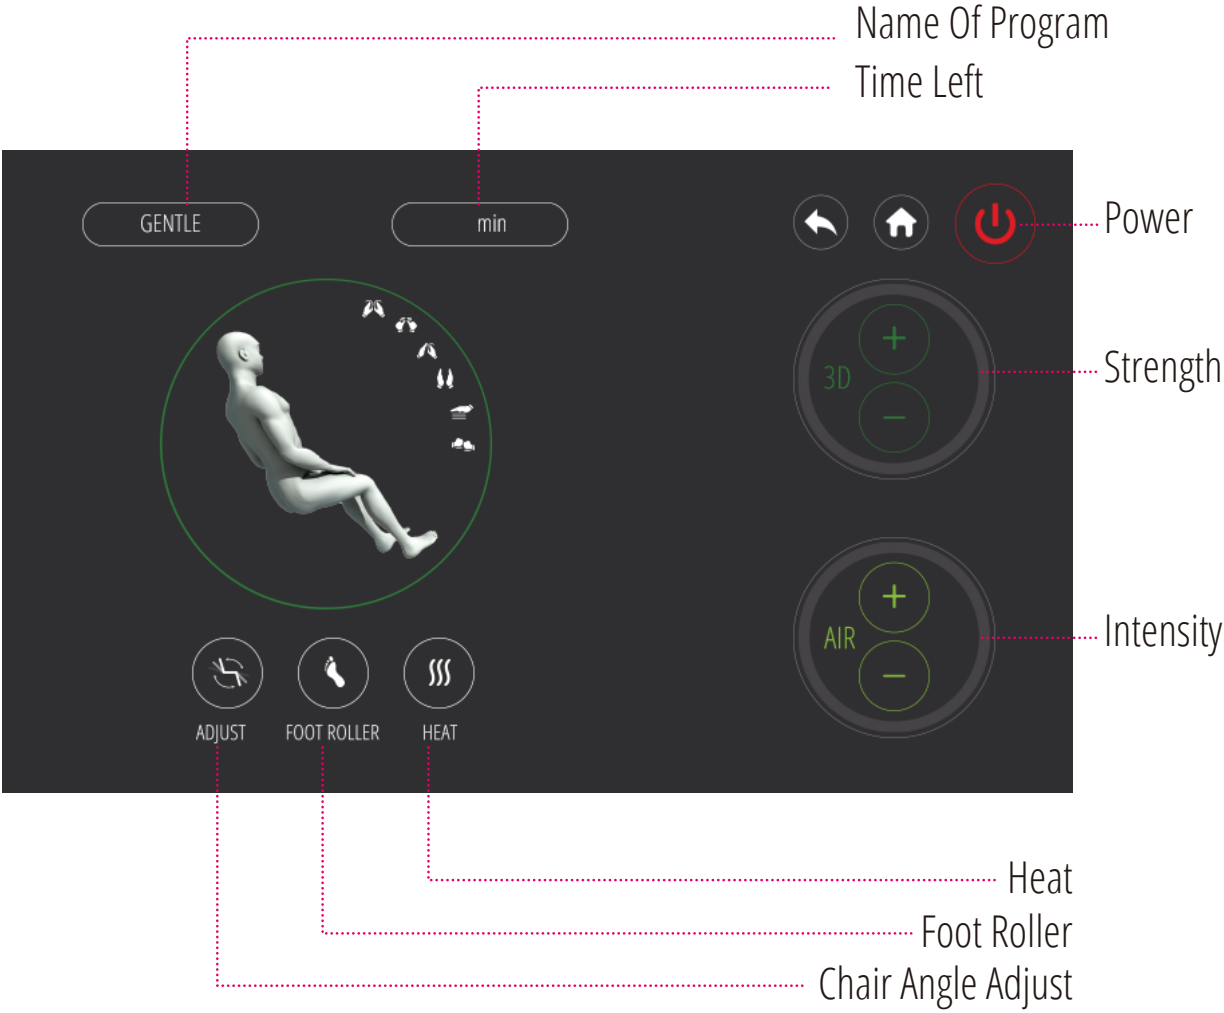 


PRE-PROGRAMMED MESSAGE

 We have designed your chair with multiple massage options for your changing needs. Follow these simple instructions to begin a new pre-programmed massage.

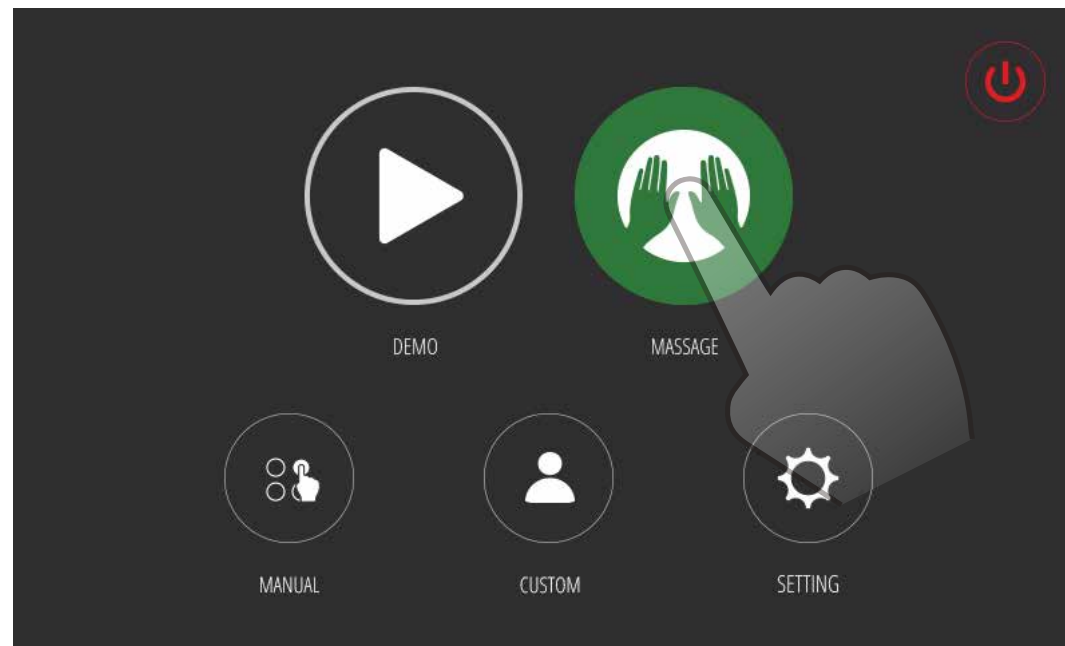


 
Choose the "Message" icon to select your pre-programmed massage

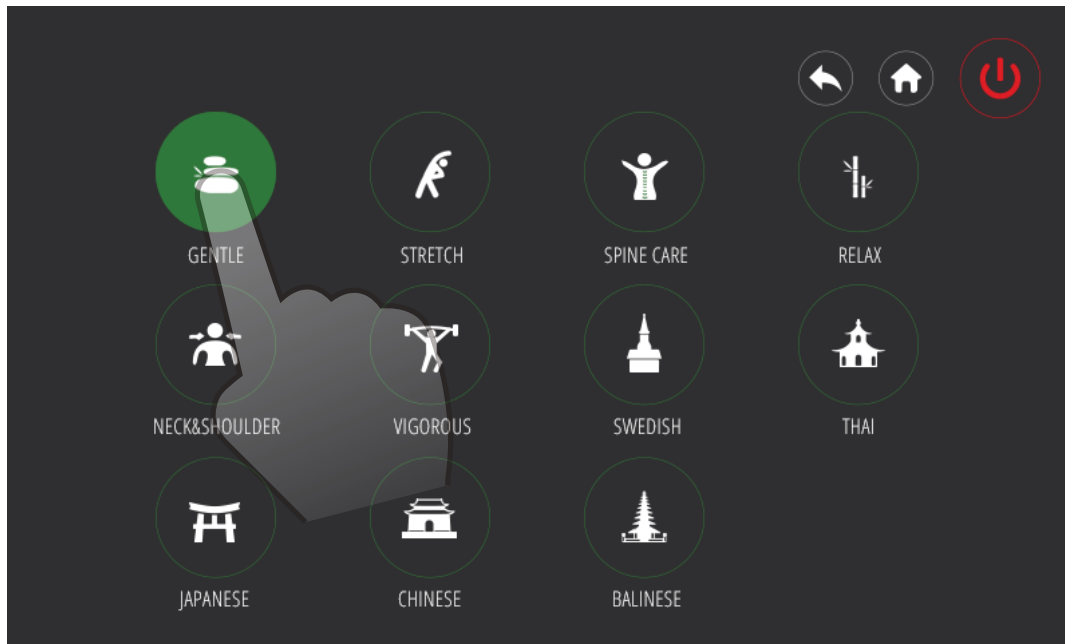

Choose 1 of our 11 pre-programmed massages

  Pre-Programmed Massage Interface

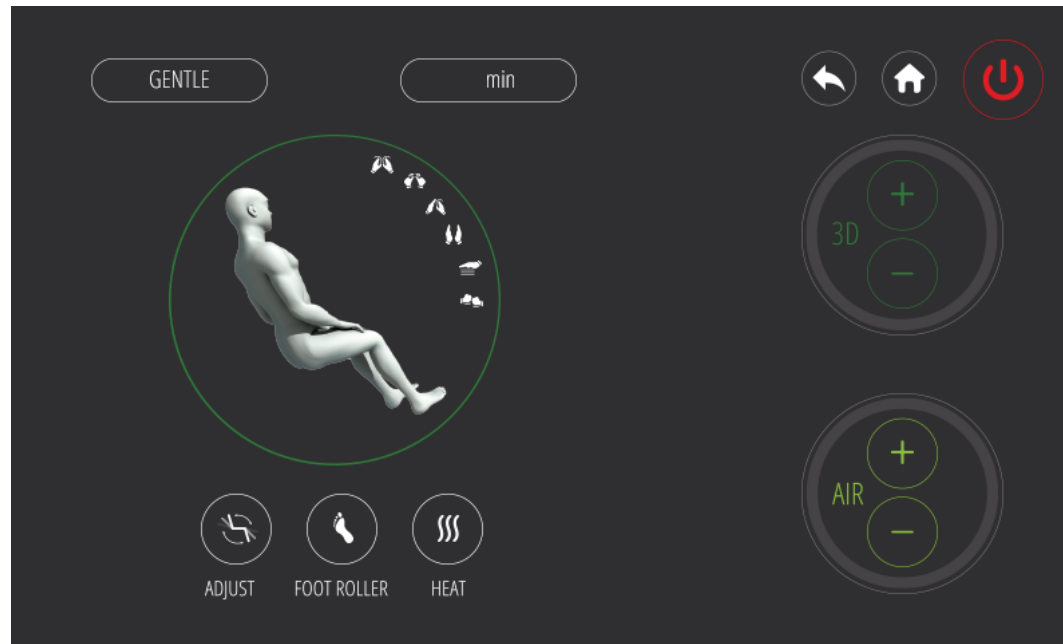


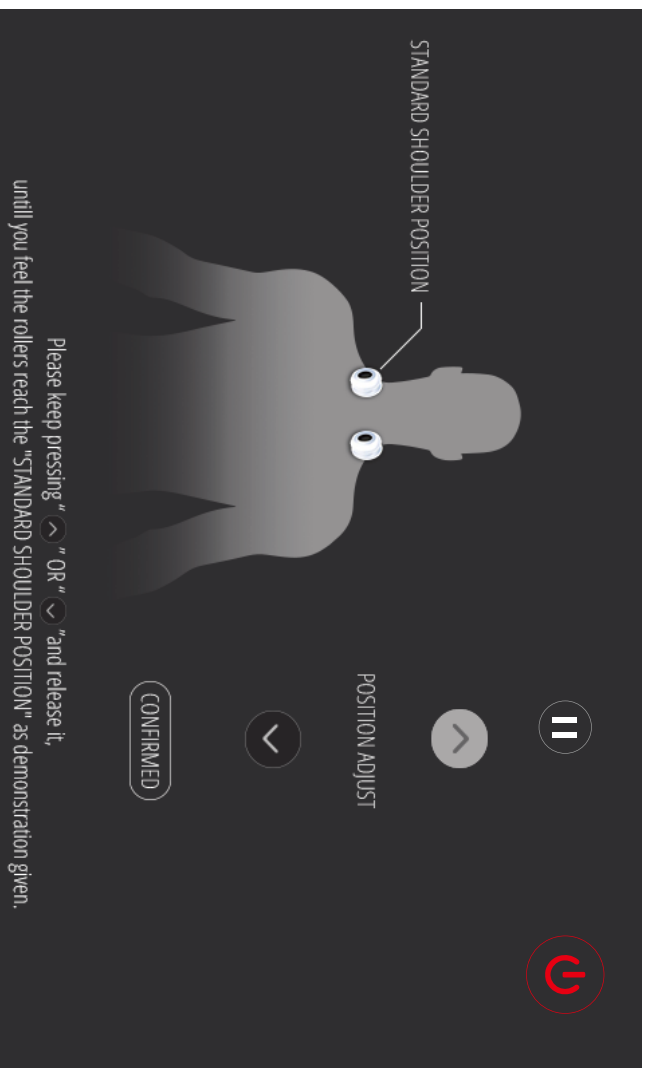

Using the arrows, you can adjust the standard shoulder position


DEMO

 In order to allow you to quickly understand your massage chair, we have created a demo program.

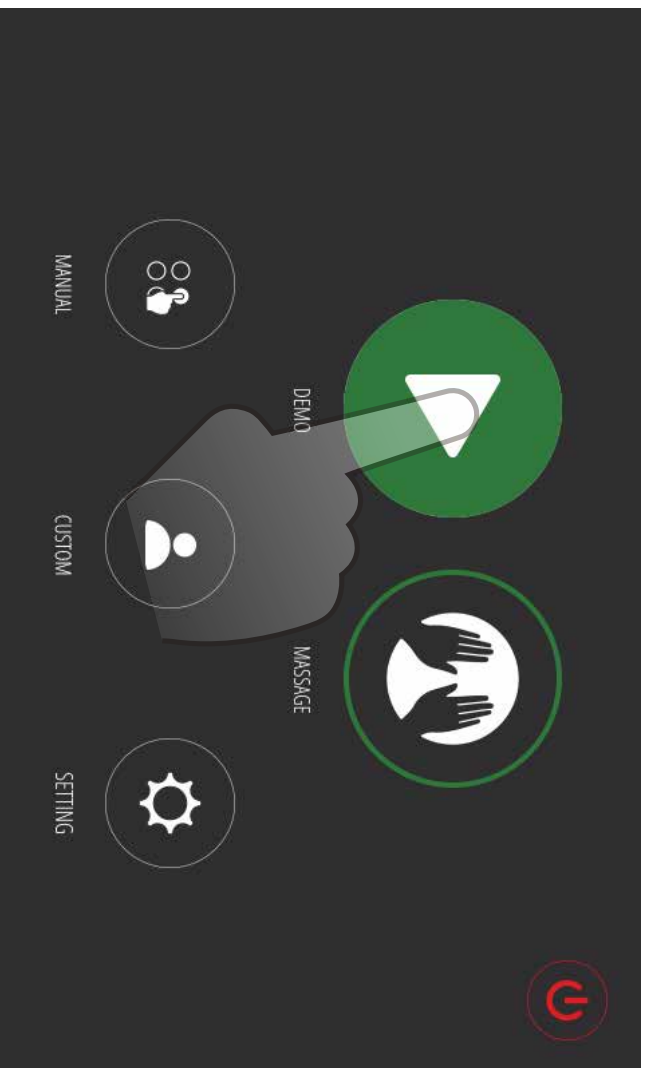


Choose the "Demo" icon to start the Demo program

 Demo Interface

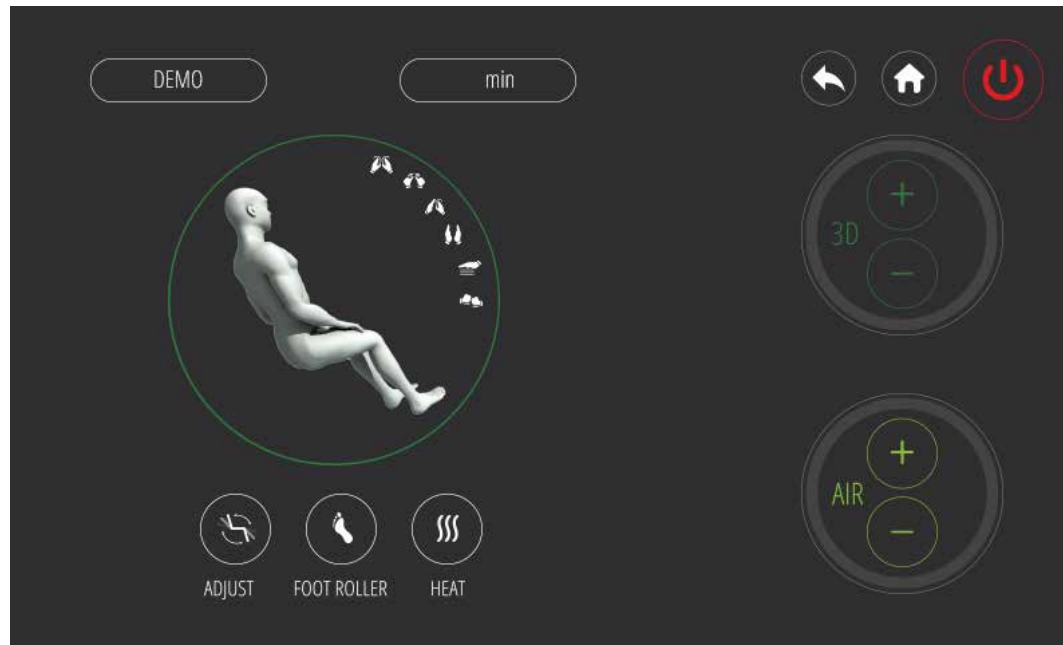


MANUAL

 Here you can choose a manual message or a compression message program.

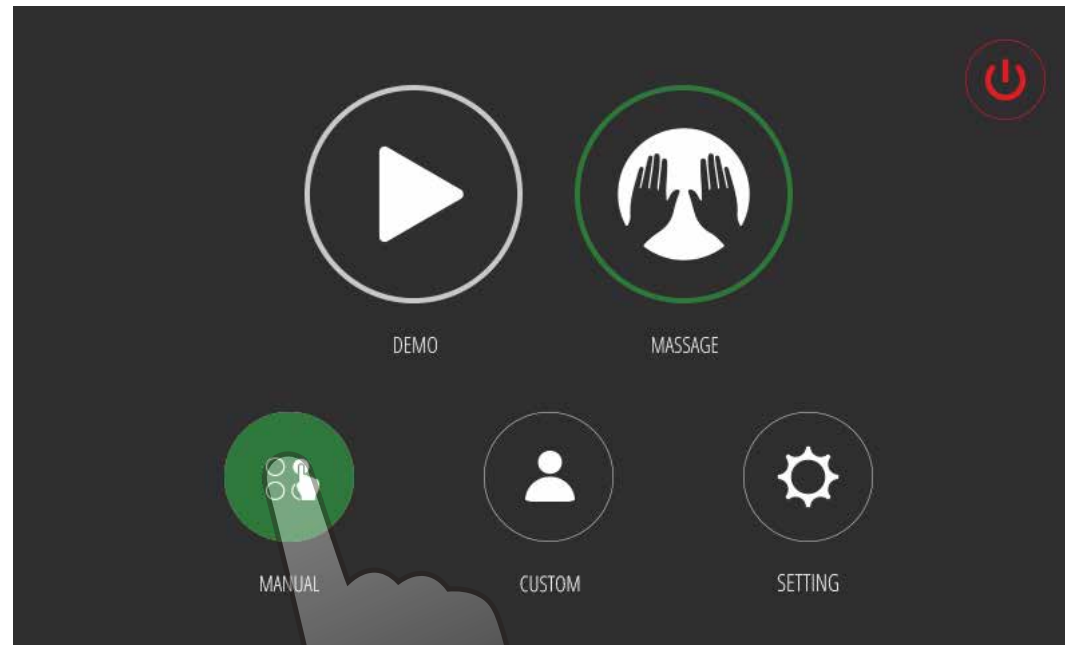


 Choose the "Manual" icon to begin manual massage

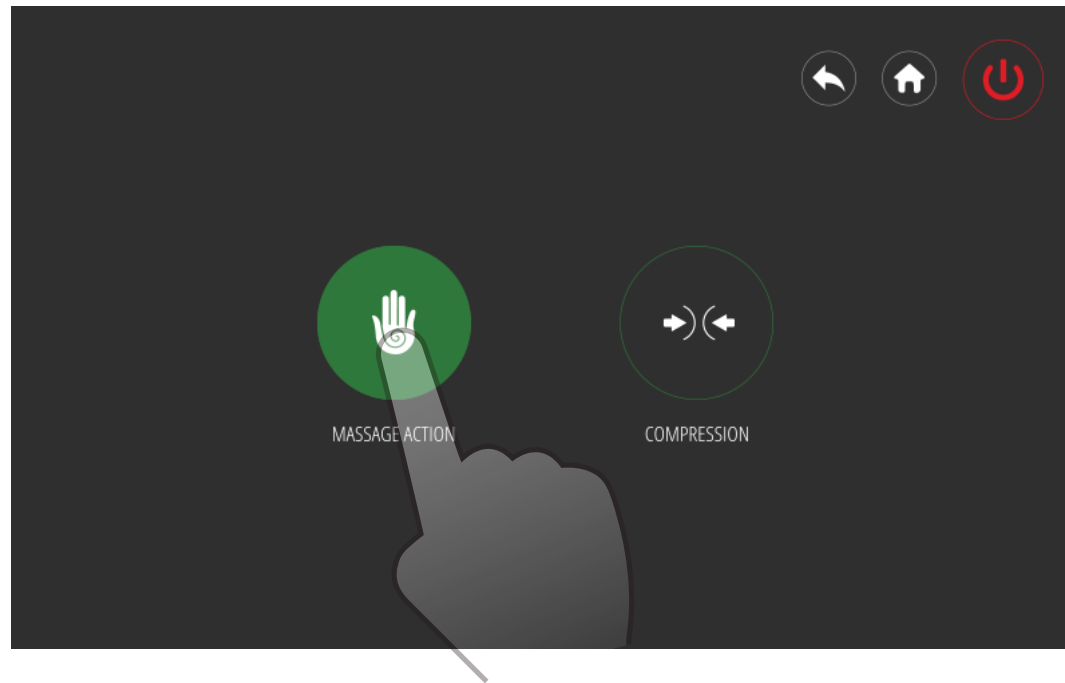


Choose the "Message Action" icon

 Massage Action Interface

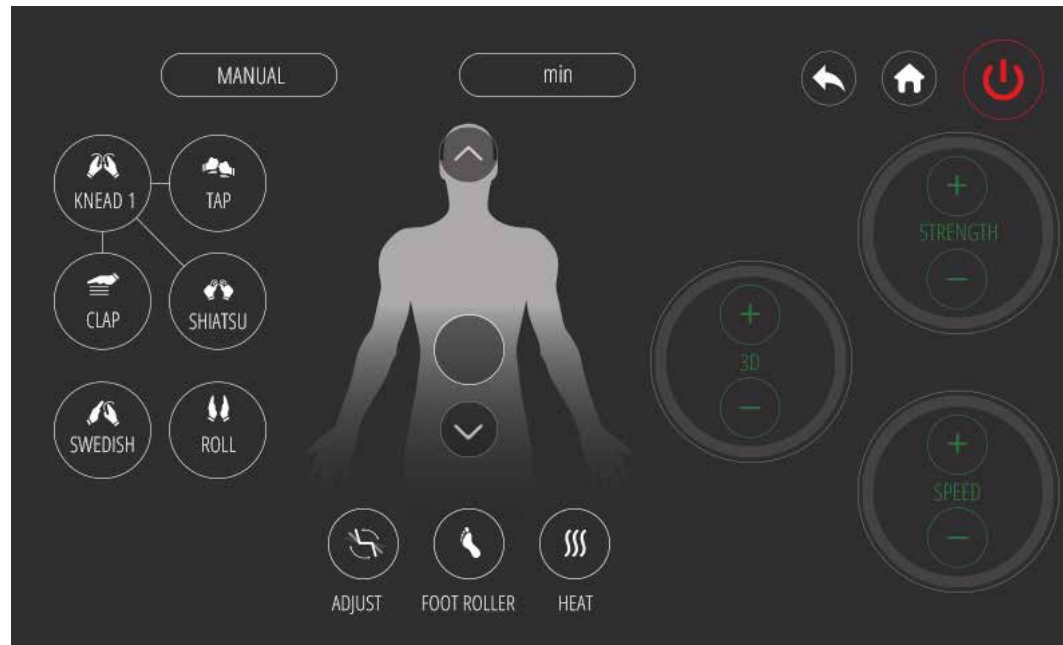


 The knead, tap, clap, and shiatsu massages can be combined with swedish or roll

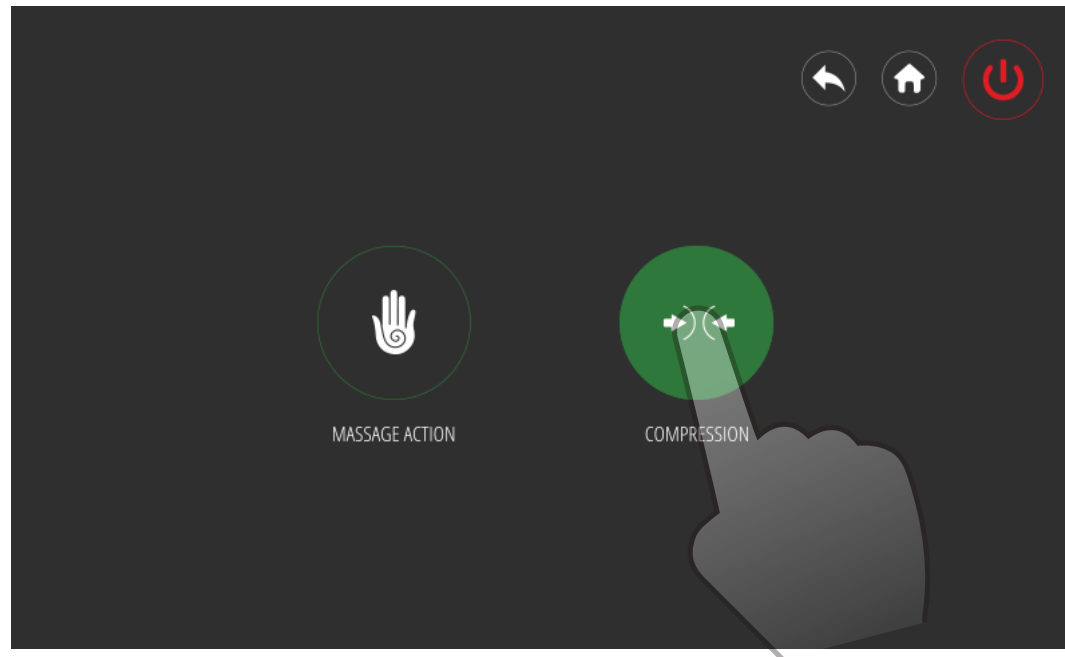


Choose the "Compression" button

 Compression Interface

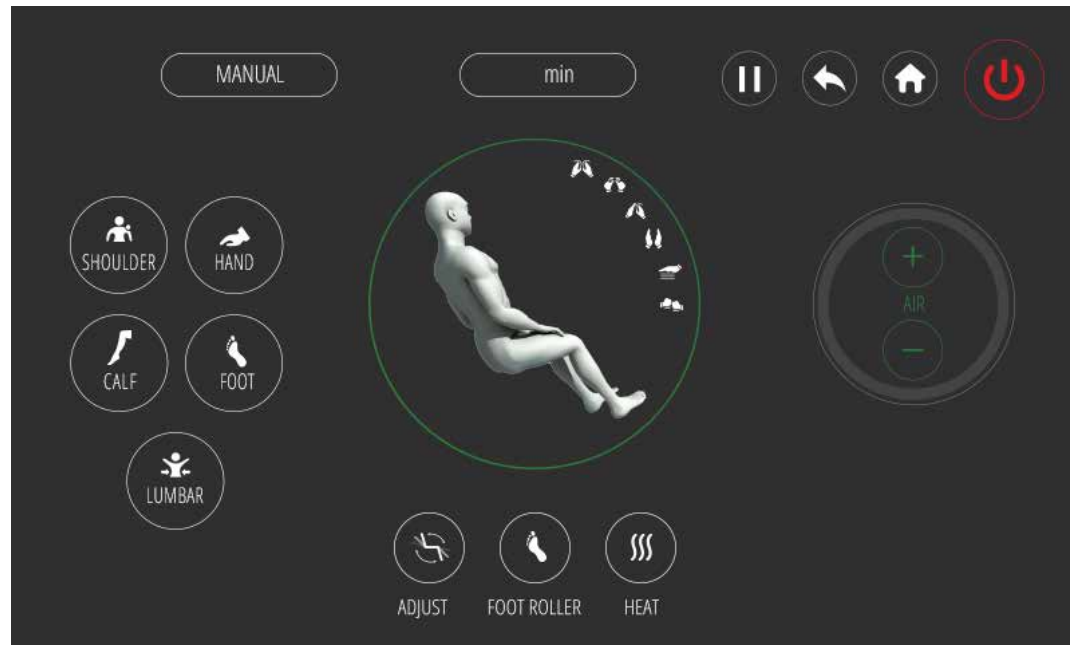


CUSTOM MESSAGE

 
Every body is different. That's why we've given you the option to customize your message to meet your specific needs. Follow these simple instructions to create a new custom message. You can create up to 3 custom programs. To delete a custom message program, press and hold that icon and choose the "x".

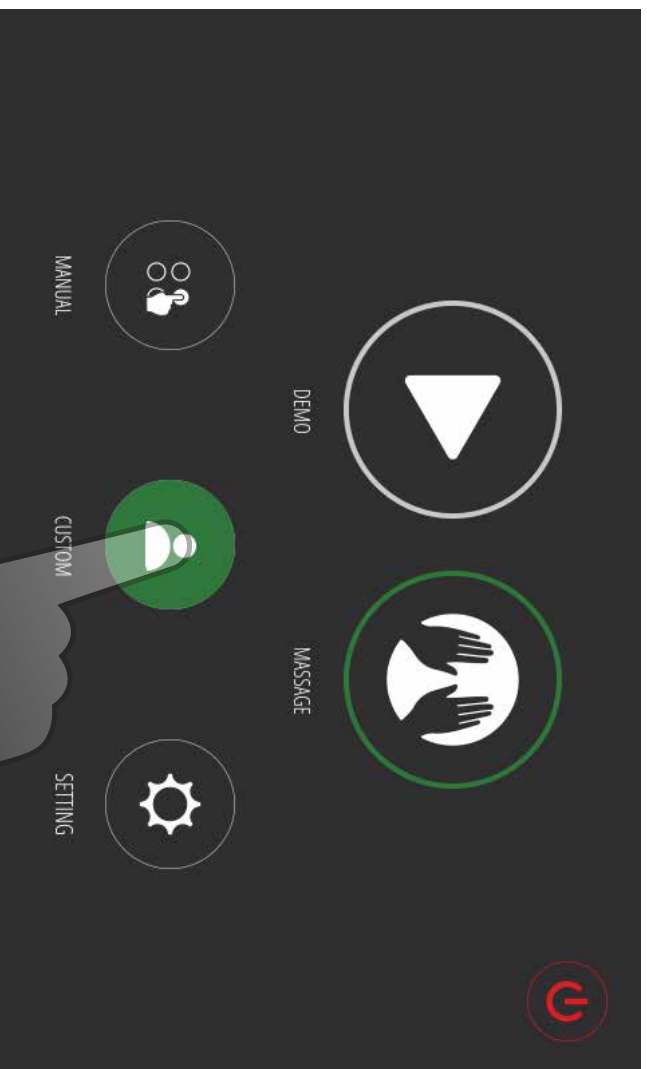

 
Choose the "Custom" icon to begin creating your message program

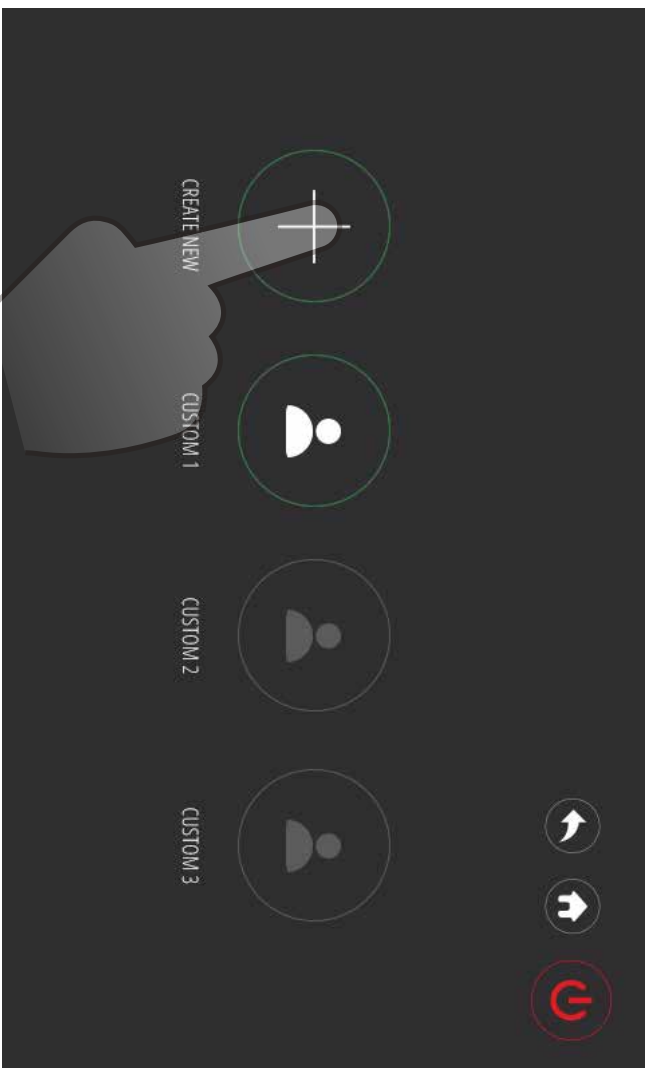

Choose the "Create New" icon

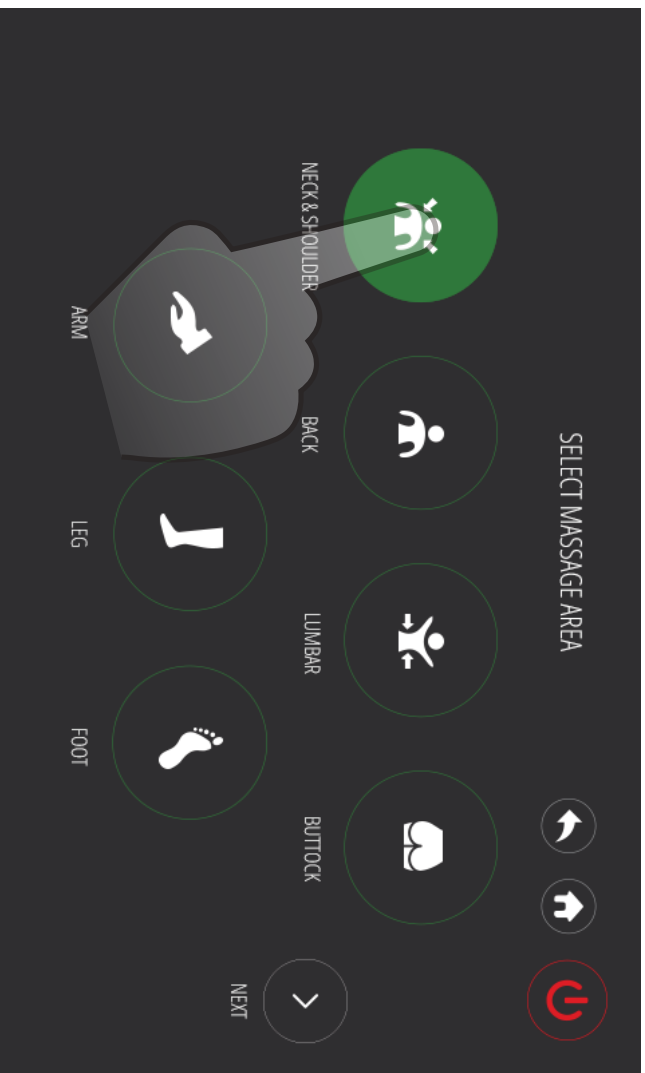 


Select which massage area you prefer

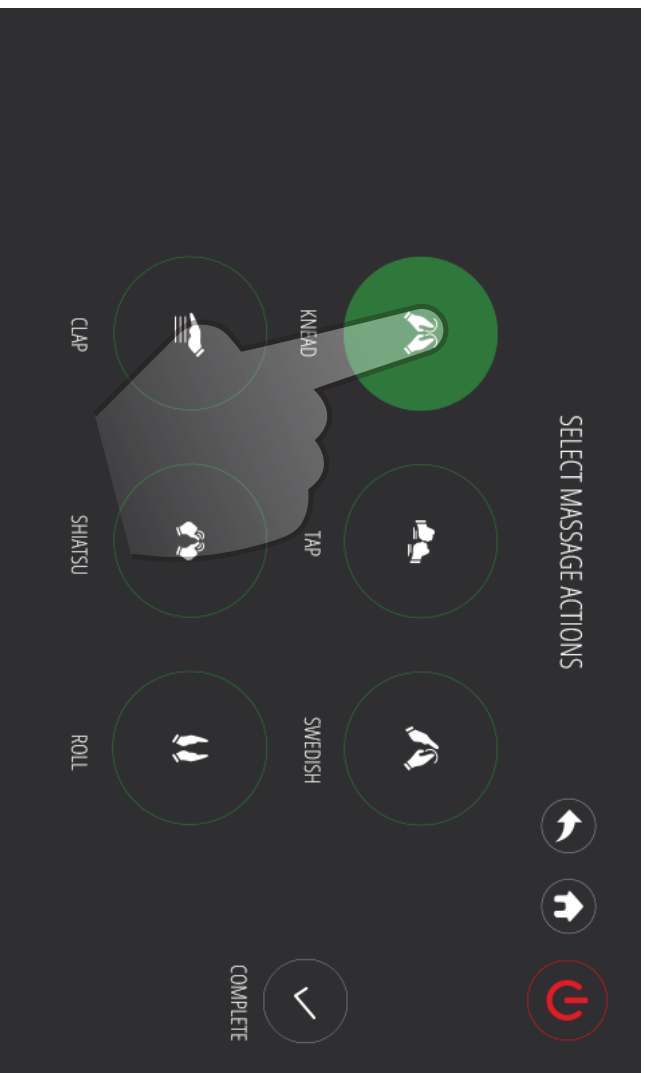 

Select your favorite massage actions. The knead, tap, clap, and shiatsu massages can be combined with swedish or roll

 SETTINGS

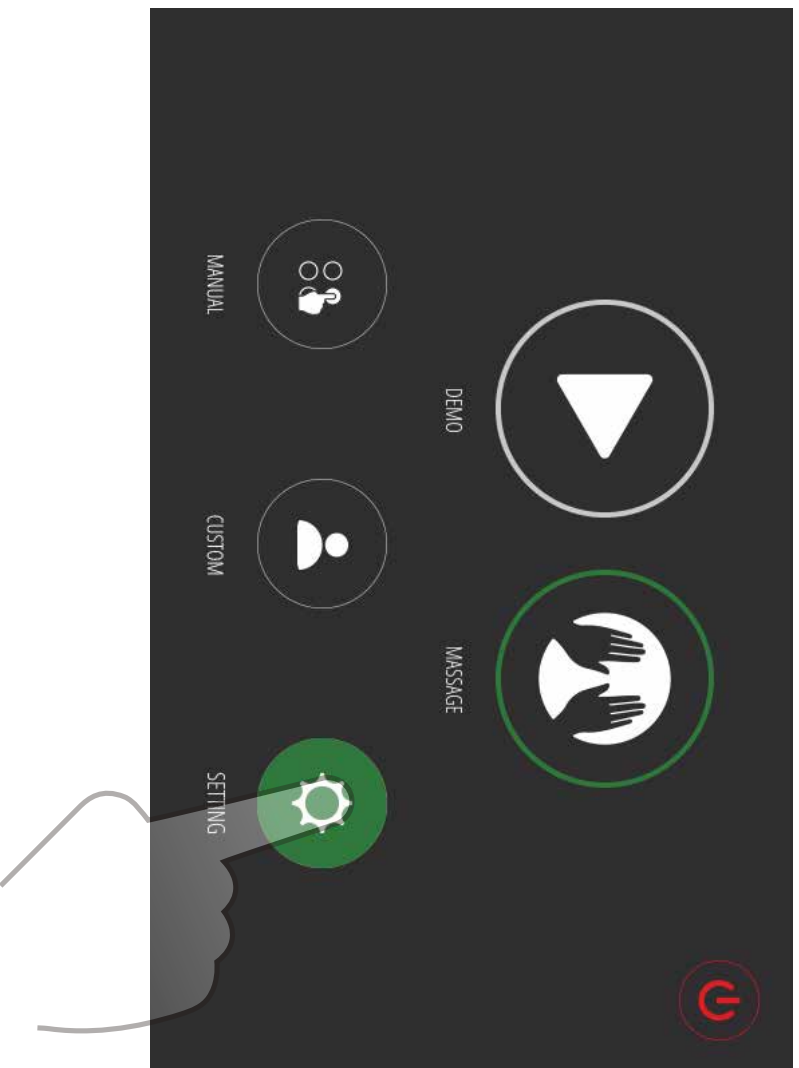

Choose the "Setting" button to take you to the settings page


Settings Interface

The screenshot shows the 'SETTINGS' menu with the following options and callouts:


- TIMER**: A slider ranging from 5 min to 30 min. A callout points to the 10 min mark with the text 'Language Adjust'.
- LANGUAGE**: A list of language options: ENGLISH, E! español, Français, Tiếng Việt, and 中文. A callout points to the ENGLISH option with the text 'Touch Sound Adjust'.
- SCREEN BRIGHTNESS**: A slider with a sun icon. A callout points to the slider with the text 'Screen Sleep Time Adjust'.
- SCREEN SLEEP**: A toggle switch currently set to OFF. A callout points to the OFF position with the text 'Screen Sleep Time Adjust'.
- TOUCH SOUND**: A button labeled 'START'. A callout points to this button with the text 'Message Time Adjust'.
- TROUBLE SHOOT**: A button at the bottom. A callout points to this button with the text 'Screen Brightness Adjust'.

At the bottom of the settings screen, there is contact information: support@ogaweworldusa.com and 1-844-438-6429.

 
Trouble Shooting

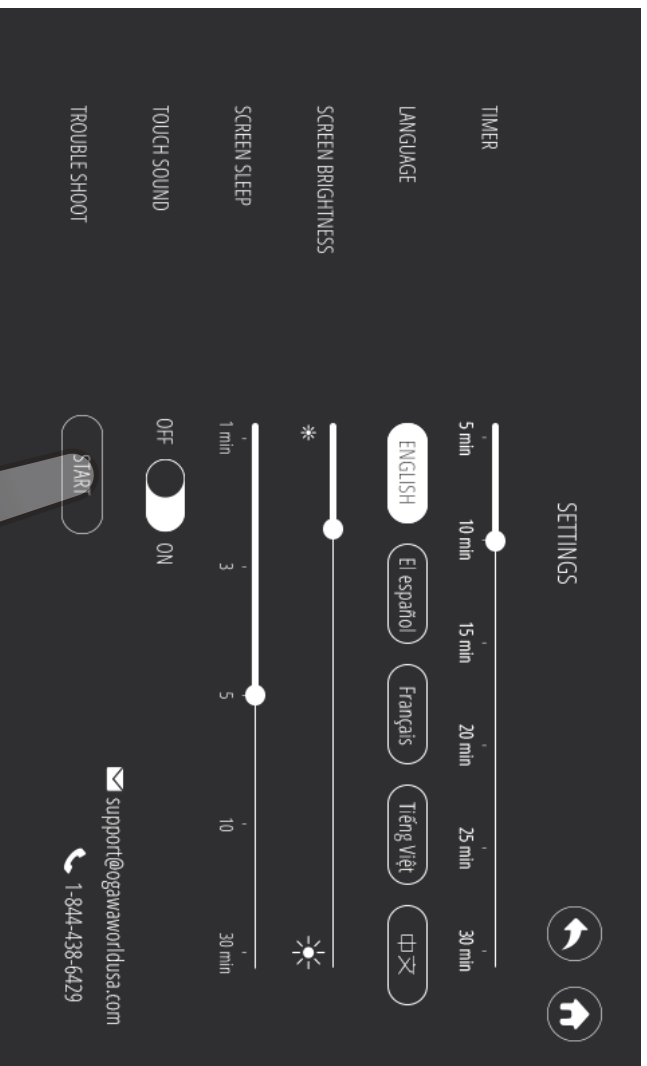

 
If your chair has any trouble, press the Trouble Shoot "Start" button for the chair to automatically detect problem areas. Provide this information when contacting our customer service team

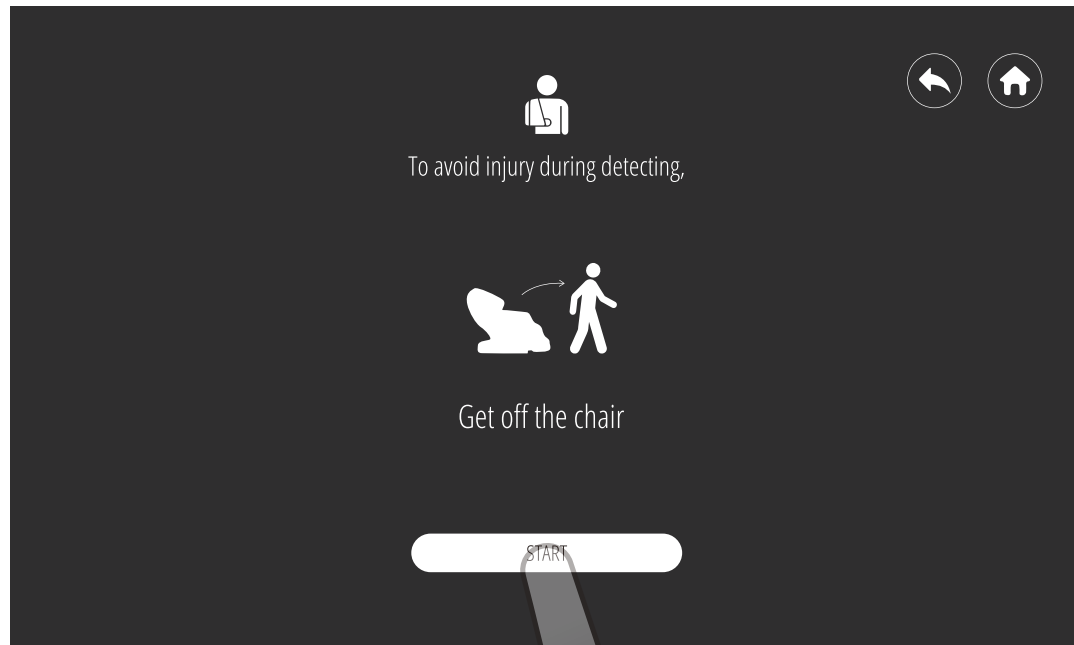

 Choose "Start" button and make sure the chair is not occupied during chair detection

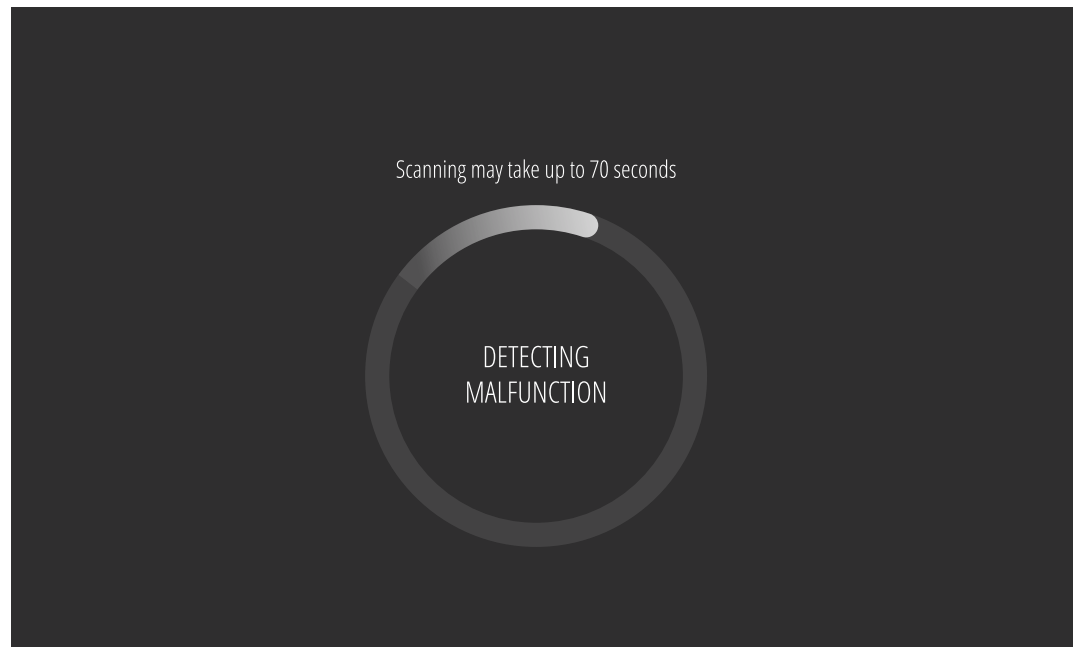

 Your chair is detecting possible malfunctions, please wait for the detection result

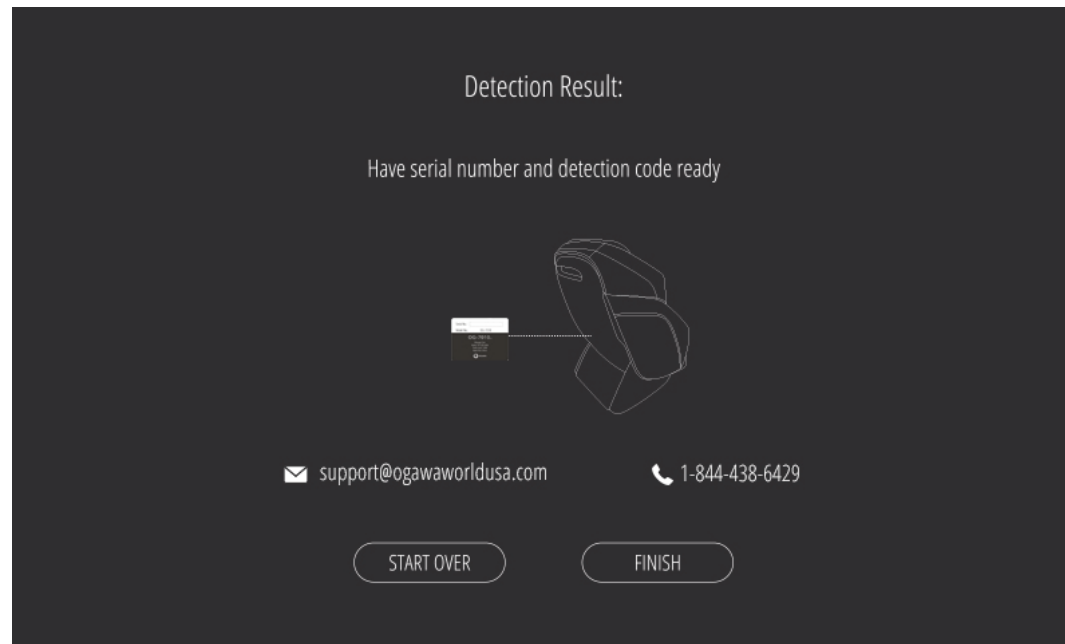

You can use your detection code when contacting the Cozzia customer service team about your chair's problems

SAFETY PRECAUTIONS

We're looking out for you.

IMPORTANT SAFETY INSTRUCTIONS

When using the massage chair, basic precautions should always be followed, including the following:
Read all instructions before using this massage chair.

DANGER - To reduce the risk of electric shock:

- Always unplug this massage chair from the electrical outlet immediately after using and before cleaning.
- Never use pins or other metallic fasteners with this appliance.
- Carefully examine the covering before each use. Call for service if the covering shows any sign of deterioration, such as blistering, peeling or cracking.
- Keep dry - do not operate in a wet or moist condition.

WARNING - To reduce the risks of burns, fire, electric shock or injury to persons:

- Read all instructions before using.
- A massage chair should never be left unattended when plugged in. Unplug from the outlet when it is not in use and before putting on or taking off parts.
- Close supervision is necessary when this massage chair is used by or near children or disabled persons. Keep children away from reclining backrest and extended leg rest.
- Use this massage chair only for its intended use as described in this manual.
- Never operate this massage chair if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Contact customer service department.
- Keep the cord away from heated surfaces.
- Never operate the massage chair with the air openings blocked. Keep the air openings free of lint, hair and the like.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove the plug from the outlet.
- Do not stand on or in the massage chair. Use only while seated.
- The product is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product.
- Temperatures sufficiently high to cause burns may occur regardless of the control setting. Do not use on an infant or invalid or on a sleeping or unconscious person. Check the skin in contact with the heated area of the appliance frequently to reduce the risk of blistering.
- Burns may result from improper use.
- Do not crush in order to avoid sharp folds.
- Keep children away from extended foot support (or other similar parts).
- DO NOT WET.
- DO NOT USE PINS.
- NEVER REMOVE COVER.
- Connect this appliance to a properly grounded outlet only. See Grounding Instructions.



SAVE THESE INSTRUCTIONS

This massage chair is intended for household use only.

1. Usage Environment

- Do not use the massage chair in an excessively humid or dusty environment as this may result in malfunction or electric shock.
- Do not use the massage chair in a room with a temperature of 104°F or higher.
- Do not expose the massage chair to heaters, stoves or direct sunlight.
- Place and use the massage chair on an even, non-slip floor.
- The massage chair is designed for home use and not for commercial purposes.



Caution

- This massage chair is to be used indoors only.
- If you use the massage chair in a cold room, do not increase the room temperature abruptly. It is recommended that you increase the temperature gradually to a normal level.
- If the massage chair is stored in a cold place and is being brought into a warm environment, it is advisable to wait for one hour before use. This is because its performance may not be at an optimal level, as there may be water droplets on the mechanical parts due to condensation. Using the massage chair under such conditions may result in malfunction.

2. Safety Precautions

- To ensure safe and correct use of the massage chair, do not operate it without reading this operation manual carefully.
- Do not use the massage chair when the upholstery or seat is removed. This may cause injury or malfunction.
- Do not use the massage chair in combination with other therapeutic equipment or electric blanket etc., as this may result in ineffectiveness or injury.
- Do not use the massage chair an hour before or after eating as this may have adverse effects on the user.
- Do not allow children or pets to play around the massage chair, e.g. behind the backrest, under the seat base or legrest of the massage chair. This may result in injury.
- Do not use the massage chair when your body is wet.
- Do not operate the massage chair with wet hands.
- It is not recommended to use the massage chair for more than 30 minutes.
- Do not perform continuous massage on the same spot of your body for more than 5 minutes at a time as this may result in excessive stimulation and may have adverse effects.
- Do not insert your hand or foot along the paths of the massage rollers during use as this may cause injury.
- Stop operation immediately if you feel any discomfort.
- This product is not intended for self-treatment of conditions that should be managed by a qualified health care provider.
- People on medication or with medical conditions, please consult your doctor before use. Please do not use the product if you are not feeling well.

3. People with Medical Conditions

Consult your doctor before use if you:

- Are under medical rest as ordered by a doctor.
- Have spinal disorders, an abnormal spinal condition or have suffered a spinal injury.
- Have back problems.
- Have diabetes, osteoporosis or sensory impairment.
- Have joint dysfunction such as rheumatism, hammertoe or gout.
- Have a pacemaker or other electronic medical devices.
- May be pregnant.
- Have phlebitis or thrombosis.
- Have an increased risk for blood clots.
- Had recent surgery.
- Have surgical pins, screws, or anything mechanical in the legs, ankles or feet.



Caution

- This massage chair is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the massage chair by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the massage chair.
- Avoid using the massage chair under the influence of alcohol.
- Do not apply massage rollers directly on the head, elbow or knee joints, torso or abdomen.
- If your legs or feet slip off the leg rest during massage, do not force them back in as this may result in injury.
- Remove the power plug from the electrical outlet immediately should liquid be accidentally spilled onto the massage chair. Do not use wet hands to connect or disconnect the power plug from the electrical outlet.
- Do not tamper with the power cord or use the massage chair with a damaged cord as this may result in malfunction and electric shock.

4. Instances When the Massage Chair Should Not Be Used

In the following events, please switch off the main power switch immediately and disconnect the power cord from the electrical outlet:

- If liquid is accidentally spilled onto the massage chair. This may result in electric shock or malfunction.
- If the fabric of the backrest is torn and the internal components are exposed.
- If pain or discomfort is felt during massage, stop operation immediately and consult your doctor.
- If you detect any malfunction or any other abnormal condition during operation.
- If there is power failure. Injury may occur when power is restored unexpectedly.
- If there is lightning.

5. Assembly and Repair of the Massage Chair

- Do not disassemble the backrest cover of the massage chair. Touching the internal components may result in malfunction or electrical shock.
- This massage chair must only be professionally serviced or repaired. Only disassemble or repair the massage chair if directed by a Cozia service rep.

6. Things to Be Noted About the Power Plug and Cord

 
- Check that the Alternating Current (AC) voltage corresponds with the specifications indicated for the massage chair.
- Do not connect or disconnect the power plug from the electrical outlet with wet hands. This may result in malfunction or electric shock.
- When disconnecting the power plug, pull it by holding the plug, not the cord.
- Although operation will be stopped automatically by the Auto-Timer function, always remember to switch off the main power after use.
- Do not place the power cord under the massage chair or on any other heavy objects.
- Do not wind the power cord around the massage chair as this may damage the cord and result in a fire or electric shock.
- Do not operate the massage chair with a damaged cord or extension cord.
- Do not use the massage chair if the electrical outlet is loose.
- If the power cord is damaged, it should be replaced by a qualified technician.

GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock. This product is equipped with a cord that has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Danger - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service technician if it will not fit the outlet. Have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120V circuit and has a grounding plug that looks like that plug illustrated below. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

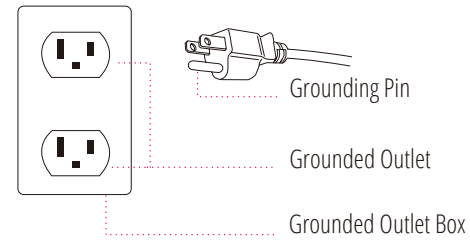

TROUBLESHOOTING

This massage chair is controlled by a microcomputer and is thus susceptible to power surges of +10 to -15%. The following situations may arise in the event of a power surge:

Situation	Solution
The massage chair is connected to the power supply but is not functioning	<ol style="list-style-type: none"> 1. Check to see that the plug is properly connected and working 2. Ensure the massage chair switch is in the 'I' position
The remote control works but the massage chair is not functioning	Possible overheating due to prolonged use. Turn off the power for at least 30 to 50 minutes
Both the remote control and the massage chair are not functioning	<ol style="list-style-type: none"> 1. Ensure the chair is plugged into a working outlet 2. Turn the power OFF and ON again

If you continue to have problems, please read the warranty card and contact the Cozia service department.

PRODUCT CARE AND STORAGE

1. Storing the Massage Chair

- Wipe off dust and dirt from the massage chair with a dry, soft, clean cloth after use.
- Keep the massage chair clean and away from places of high humidity.
- If the massage chair is not to be used for a long period of time, cover the massage chair with a dust cover and unplug its power plug from the electrical outlet.

Caution

- Do not store the massage chair in direct sunlight or in places of high temperature. This may cause the color of the upholstery to fade.
- Do not allow the massage chair to remain in contact with vinyl or wallpaper for extended periods of time as this could lead to discoloration.

2. Cleaning the Massage Chair

- Before cleaning, ensure that the main power switch is off and the power plug is disconnected from the electrical outlet.
- Wipe off dust and dirt from the massage with a dry, soft, clean cloth after each use.
- This product can be cleaned thoroughly with a slightly damp cloth.
- Do not iron the upholstery.
- Do not wash the upholstery using a home washing machine as this may result in deterioration of the upholstery's quality.

Caution

- Do not use abrasive cleaning agents like benzene or thinner to clean the massage chair. This may cause the upholstery to fade.

3. Cleaning the Controller

- Use only a clean, dry cloth to clean the controller.

Caution

- Do not use a wet cloth to clean the controller. This may result in malfunction.

COZZIA CONSUMER WARRANTY

Cozzia products have the following warranty:

The Cozzia massage chair CZ-7505 has a one year in-home and two years parts service warranty. Cozzia customer service will not issue Return Material Authorizations (RMAs) for products. Cozzia products will be either repaired by the consumer or by an in-home technician. Cozzia will not issue Return Material Authorizations (RMAs) for buyer's remorse.

Service And Technical Support

Consumers may contact customer service department at 1-888-270-8538 between 8:00am- 4:00pm MST, Monday through Friday, email us at service@cozzia.ca, or visit our web at www.cozzia.ca for warranty or service issues.

Consumers are required to provide the unit serial number and dated proof of purchase (sales receipt) when they contact the Cozzia service department regarding a repair.

A Cozzia customer service representative will attend to most consumer inquiries, but in some cases a technical service specialist will provide advanced support.

Non-warranty repair is provided on a "per incident" basis. Cozzia customer service will verify that the unit has failed and provide instructions for repairing the unit. All applicable repairs, parts, shipping, handling, local tax and a "per incident" fee will be charged for non-warranty repairs and support calls.

Proof of purchase (original receipt) is required for all warranty repairs or service.

Extended Warranties:

Cozzia offers extended warranty programs to enhance the ownership of your massage chair. Please call Cozzia customer service at 888-270-8538 for details and pricing.

Product Repairs

- Floor Models and Demonstration Units have a prorated warranty period that begins the day the model is placed on the floor and connected to an electrical outlet by the retail partner. Proof of purchase is required in order to obtain warranty service and parts. Non-warranty parts and service are available at a "per incident" charge.
- Warranty Coverage Period - Warranty coverage starts at the time that the consumer PURCHASES their chair. Proof of purchase is required for all warranty repairs. The warranty time period is measured by continuous calendar days based on a seven-day week.
- Field Service - Cozia customer service department will diagnose and schedule an authorized service provider to repair the chair in the consumer's residence.
- Parts - All parts deemed necessary for repairs will be shipped to the consumer at no charge by the Cozia service department. Some Cozia product repairs may be performed by the consumer in their own home with parts and instructions supplied by Cozia, such as remote controller replacements that don't require a technician.

CONSUMER WARRANTY LIMITATIONS AND EXCLUSIONS

- Warranties are only valid in the 48 contiguous United States and Canada and are contingent upon the consumer operating the chair according to the corresponding instruction manual.
- The warranty only applies to Cozia products and does not include any accessories or enhancements.
- Field service requires pre-approval and must be performed by Cozia's authorized field service personnel.
- Field service is only available in the United States and in major metropolitan areas in Canada.
- Softening of foams and filling composites in pillows, pads, and memory foam occurs naturally and does not constitute a defect under this warranty.
- Fading, wear and piling of fabrics occurs naturally and does not constitute a defect under this warranty.
- Warranties do not cover any loss or damage resulting from improper installation, unauthorized repairs or modifications, improper use of electrical/power supply, loss of power, dropped product, a malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance, transportation damage, theft, abuse, misuse, neglect, vandalism or environmental conditions (fire, floods, rust, corrosion, sand, dirt, windstorm, hail, earthquake or exposure to weather conditions), loss of use during the period the product is at a repair facility, or otherwise awaiting parts or repair.
- Under no circumstance shall Cozia or its representatives be liable for indirect, consequential, or incidental damages (including damages for lost profits, business interruption, bodily injury, medical and the like), even if any party has been advised of the possibility of such damages.
- Warranties are non-transferable.
- Cozia's sole liability and the purchaser's exclusive remedy shall be for the repair, or at Cozia's option, for the replacement of the defective part.
- Notwithstanding the above, if replacements parts for defective materials are not available, Cozia reserves the right to make substitutions in lieu of repair or replacement.
- All warranties begin on the DATE OF PURCHASE; no allowance or extension is offered for delivery and/or installation.
- Warranties do not apply to rental, business, commercial, institutional or other non-residential users.

cozzia®